

# EDGE REPLAY

## Setup Guide

### 1-View & 2-View




[www.sportscopevideo.com](http://www.sportscopevideo.com)


[info@sportscopevideo.com](mailto:info@sportscopevideo.com)

888-335-7875

# 1 View EDGE Replay

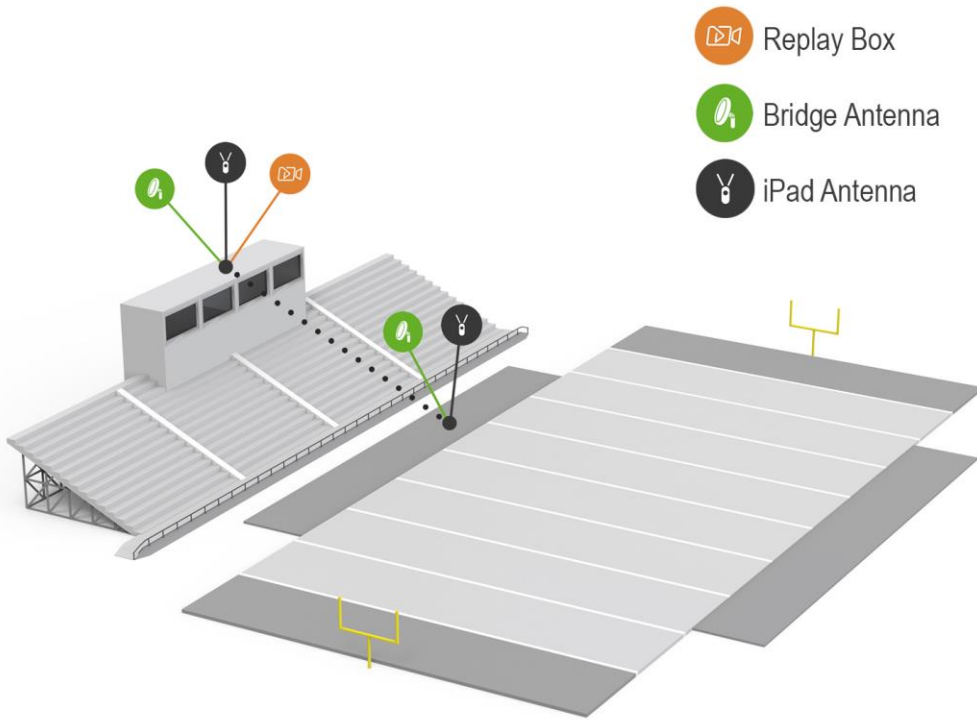

# 2 View EDGE Replay

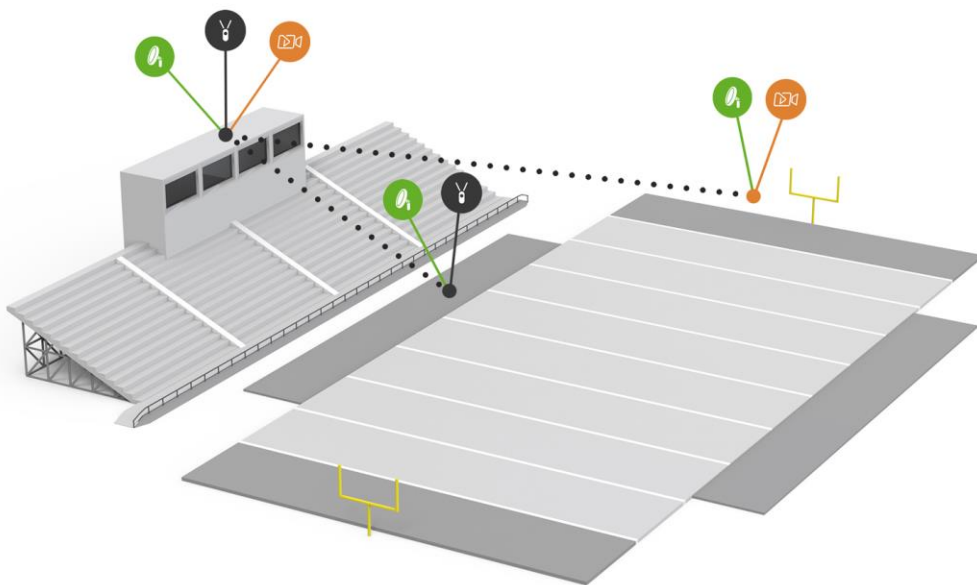

## Network Setup - Press Box

1. Open Press Box hard case & plug in extension cord. Router takes 1 min to boot.



2. Connect iPad & Bridge antennas to Router.  
3. Screw small antennas on the iPad Antenna and put antennas at 45°. The small antennas can be found in the inside pocket of the network bag.



**IMPORTANT:** Take small antennas off the iPad Antenna when storing. Failure to do so may cause damage.

4. Suction the iPad Antenna to the inside of the window next to your coaches (within 15 ft.)



5. Raise tripod with Bridge antenna above obstructions. All Bridge antennas must be line of sight of each other. You can put the Bridge antenna on top of the press box if needed.



6. Aim Bridge antenna down between 50 yard line and the endzone where your endzone camera will be set up.

7. Level the Bridge antenna.



8. After you set up the Sideline and Endzone Bridges, your Press Box Bridge will have 4 blue lights on its strength bar. Adjust as needed to get 4 lights.



9. Connect your press box camera to the EDGE Replay box in the camera port with an HDMI cable.



10. Only connect a camera to the **Connect Camera** port. The **Connect Monitor** port is for external monitors only.



**IMPORTANT:** Only connect iPads that are in the press box to the SportScopePressBox Wi-Fi network. Stay within 15 ft. of iPad antenna for best connection.

## Network Setup - Sideline

1. Open Sideline hard case & turn battery ON. Switch takes 1 min to boot.



2. Connect iPad and Bridge antennas to Switch.  
3. Screw small antennas on the iPad Antenna and put antennas at 45°. The small antennas are found in the inside pocket of the network bag.



**IMPORTANT:** Take small antennas off the iPad Antenna when storing. Failure to do so may cause damage.

4. Raise tripod with antennas to head height.  
5. Aim Sideline Bridge Antenna up to the Press Box Bridge Antenna.



6. Level the Bridge antenna. After the Sideline and Press Box Bridge antennas link (2 mins.) you will see 4 blue lights on its strength bar. Adjust as needed to get 4 lights.



**IMPORTANT:** Only connect iPads that are on the sideline to the SportScopeSideline Wi-Fi network. Stay within 15 ft. of iPad antenna for best connection.

## Network Setup - Endzone (2-View Only)

1. Open Endzone hard case & turn battery ON.
2. Plug USB cable from battery into EDGE Replay box's **Power** port.



3. Connect Endzone Bridge Antenna to POE injector.



4. Clamp Endzone Bridge to your endzone camera's leg or pole.
5. Aim Endzone Bridge up to the Press Box Bridge.



6. Level the Bridge antenna. After Endzone and Press Box Bridge antennas link (2 mins.) you will see 4 blue lights on its strength bar. Adjust as needed to get 4 lights.





6. Connect endzone camera's HDMI cable into the **Connect Camera** port of the EDGE Replay box.
7. Connect HDMI cable from **Connect Monitor** port to your endzone camera's monitor.




**IMPORTANT:** To test your system you need to connect to either the [SportScopeSideline](#) or [SportScopePressBox](#) Wi-Fi network.

**IMPORTANT:** Your controlling iPad needs to be close to (within 15 ft.) either the [Press Box](#) or [Sideline iPad antenna](#). They **CANNOT** start/stop clips from the endzone.

## Connecting iPads

1. Download the **Sport Scope** iPad app from the App Store. 
2. Go to your iPad **Settings**. 
3. Select **Wi-Fi** on the left pane.
4. If you're on the sideline, **ONLY** connect to the **SportScopeSideline** Wi-Fi network. If you're in the press box, **ONLY** connect to the **SportScopePressBox** Wi-Fi network.
5. Enter your password.

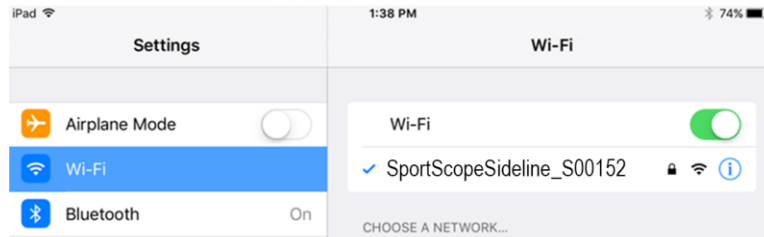

## Start Recording a Game

1. Open the Sport Scope app.
2. Go to the menu in the top left, select **Games** and then **New**.
3. Fill out the form, select your cameras, and then select **Start Game**.
4. You can now hit the **Record & Stop** button to record a clip.
5. After each clip is recorded, all iPads connected to the **SportScopeSideline** or the **SportScopePressBox** Wi-Fi network will auto-download it for instant replays.
6. Select a recorded clip to replay it.

## Upload Videos After Game

1. Go to the menu in the top left, select **Games** and tap **Select** in the top right.
2. Select the game(s) you want to upload.
3. Select **Share** and then **To iTunes (recommended)**.
4. Connect your iPad to your laptop and open **iTunes** on your laptop.
5. You may need to select **Trust Computer** on your iPad.
6. Select the **iPad icon** near the top left of the iTunes window.
7. Select **File Sharing** on the left menu.
8. Select **Sport Scope** under Apps.
9. Select your game and **Save**, save to your desktop.
10. Use Hudl Mercury, Hudl.com or another provider to upload.

## Camera Setup

### 1. Sony cameras:

Most Sony cameras will work with EDGE Replay without any need to adjust settings. However, if you do get an error message saying **Camera-Offline** then try the following steps to set you camera to the correct output resolution.

Go to **MENU > Image Quality/Size > REC Mode > Select High or Highest Quality.**  
Go to **MENU > Setup > HDMI Resolution > Select Auto**

### 2. Other camera brands:

EDGE Replay boxes need a 720p HDMI output feed to capture video. You can still record to your SD card in 1080p or greater. If you get an error message saying **Camera-Offline** then try the following steps.

Go to your **HDMI output** settings and select **720p**.

If not available, please contact us for help.

## Charging Batteries

1. Connect the charger to the battery's **Input** port.
2. You can leave the battery in the hard case while it charges.
3. Battery will shut off when fully charged.
4. This battery lasts 6-7 hrs.

**IMPORTANT:** Charge batteries before each game.



## Covering Equipment

1. **Move the cables towards the opening** of the case and gently shut the lid. Do **NOT** latch the case, this will pinch the cables.
2. There will be a small gap, but rain should not get inside.
3. All iPad and Bridge antennas are waterproof.

